

## 50 lb Scale Adjustment Procedure



This indicator should be at the zero point (above image).

If it is not, use a hook or paperclip to engage detents in the black plastic wheel inside the adjustment hole to rotate the wheel. Check to see the direction indicator is moving, you may need to reverse direction to achieve the desired direction.  
(below image)

