

150 lb Scale Adjustment Procedure



This indicator should be at the zero point.

If it is not, use your finger or allen wrench to rotate screwhead. Check to see the direction indicator is moving, you may need to reverse direction to achieve the desired direction.